

Kase Desk

Using Your Furniture



User Guide

Living alongside objects that make you happy is what makes us happy. Your desk may seem simple, but there has been much brow-furrowing and chin stroking to refine it into an essential, classic piece that will withstand daily wear and tear for years to come.

We designed every aspect of the Kase Desk with performance in mind. Please read the following guidelines to ensure optimum durability and on-going enjoyment.

Powder Coated Frame

To clean the powder coat surface we suggest using a mild, non-abrasive household cleaner. Stubborn marks can be removed with a diluted cream cleaner, but work it in gently so as not to damage the surface.

Laminate Top

To clean your laminate surface we suggest using a non-abrasive household cleaner and wiping dry with a clean cloth. A cream cleaner can also be applied with a little water on stubborn marks, but work it in gently so as not to damage the surface. For tougher stains on the laminate surfaces such as Felt Pen, Paint or Glue we recommend Methylated Spirits or Acetone. Always pre-test with a small, hidden area. After using the solutions recommended above, always wipe with a clean dry cloth. Never use abrasive cleaners, wire wool scourer pads or copper cleaner pads.

Timber and Veneer Tops

To care for your timber or veneer top we suggest treating spills as soon as possible by cleaning the surface with a non-abrasive household cleaner and wiping dry with a clean cloth. The surface is protected with a hard wearing two-pack lacquer, but it is important that no abrasive materials or cleaners are used. Where possible your table should be protected from direct heat sources and sunlight. If the table is positioned in direct sunlight, move items around to avoid spotting and colour change.

General Care & Dismantling

Always use two people when lifting or moving your table to protect the frame, never drag it. The frame can be dismantled if required. To remove the top from the frame, unscrew the screws with a Phillips head screwdriver. To dismantle the frame, loosen the nuts in the side of the frame with an adjustable spanner (for 8mm) then remove the bolts. If you require assistance, please contact us to book an Installer.

Repairs

We are hard taskmasters – even after many years of service when your table might be looking forward to a quiet retirement, it can be refinished or parts replaced to give it a new lease of life. The table is made from components that easily come apart, so if in the event that any part is damaged, or the surface requires powder coating, let us know and we can arrange accordingly.

If you have any further queries regarding the care or handling of your desk please don't hesitate to contact us. We hope you enjoy your Kase Desk as much as we did making it.

Warranty

Kase Desk has a 10 year Warranty against defects in materials and workmanship, subject to proper use and care effective from the date of delivery.

This warranty does not apply to product failure resulting from:

- Failure to apply, install, or maintain products according to the Care and Handling guidelines
- Normal wear and tear
- Abuse, misuse, or accident
- Alteration or modification of the product
- Changes in surface finishes due to aging or exposure to sun and light

The warranty is valid providing the product has been installed and used in accordance with the Care and Handling instructions above. This warranty extends only to the original purchasers who acquire new product from IMO or its authorised distributors.